

# AutoTrimPro

## Quickstart Guide

ELECTRIC

1

### Component Installation

There are only two components to install—the Helm Display and the Control Unit. Refer to the Install/User’s manual for the drilling template, system wiring diagram, and other detailed information.

2

### One-time calibration

Launch the boat, and follow the “System Set-up and calibration” instructions in the full installation manual. This is a one-time set-up procedure which only takes a few minutes to perform.

3

### Store Favorites

Get your boat to the desired pitch and roll. Then press and hold either the FAV1 or FAV2 buttons for five seconds (or more).  
**Simply tap either FAV button to activate auto mode any time!**

**Tab Position Indication**  
Shows the current position of the trim tabs in manual and automatic mode.

**Auto Trim Activity Indication**  
LEDs alert you to the automatic movements of the tabs in real time. You can see exactly what adjustments AutoTrim Pro is doing for you.

**Dim or Brighten LEDs**

**Trim Tab Controls (Manual)**  
Override automatic mode with a touch to take full manual command of the trim tabs.

**Favorite Settings (Automatic)**  
Store and activate two “Favorite” pitch and roll settings to automatically achieve your preferred cruising attitude.

**Buttons:** ALL UP, FAV1, FAV2, ALL DN

**Labels:** PORT, DN, DN, BOW UP, BOW UP, STBD

**Logo:** BENNETT

**Bottom Label:** AUTO TAB CONTROL

**Tabs “All Up” or “All Down” (Semi-automatic)**  
Fully retract or deploy tabs with a single touch in manual mode whenever needed.


# AutoTrimPro

## Quick Calibration & Set-up Steps

These steps cannot be completed until the boat is launched and in the water.  
For more detailed information, refer to page 14 of the Installation & User Guide.


### 1 Rest State Orientation

With the boat at rest in the water, press and hold the **Sun + All UP** buttons for 3 seconds. All four corner LEDs will flash indicating that a setting has been made.

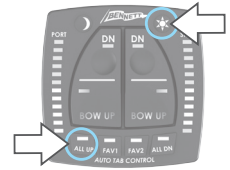


### 2 Acceleration State Orientation

Press and hold the **Sun + FAV1** buttons for 3 seconds. All four corner LEDs will flash indicating readiness. Throttle up to speed in a straight line without using the trim tabs. After 10 seconds FAV1 and FAV2 will stop flashing. Orientation is now complete.

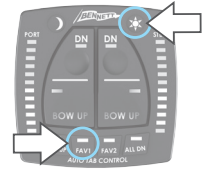


### 3 Rest Angle Set-up

With the boat at rest in the water, press and hold the **Moon + All UP** buttons for three seconds. All four corner LEDs will flash to indicate that a setting has been made.

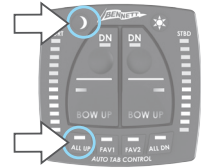


### 4 Idle Angle Set-up

In relatively calm water with the trim tabs fully retracted (Up), run the vessel at a typical "No Wake Zone" idle speed. At a steady running attitude, press and hold the **Moon + FAV1** buttons for 5 seconds (or longer). Once released, all four corner LEDs will flash indicating that a setting has been made.

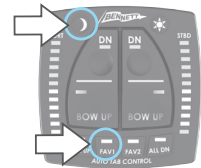


### 5 Planing Angle Set-up

In relatively calm water, put the trim tabs to a half-down position and run the boat at it's fastest safe speed. Once at a steady pitch and speed press and hold the **Moon + FAV2** buttons for 5 seconds (or longer). Once released, all four corner LEDs will flash indicating that a setting has been made.

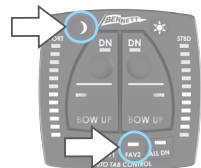

### 6 Storing and Activating Favorite Settings

To use AutoTrim Pro in AUTO mode, you first need to set a "Favorite" setting. Manually adjust the trim tabs, throttle, and engine trim to attain your desired boat attitude. Next, press and hold the **FAV1 OR FAV2** button for 3 seconds (or more). Once released, the LED will illuminate, and the system will immediately go into AUTO mode. Pressing any other button on the control will deactivate AUTO mode putting you back in manual control. Reactivate the FAV setting any time with a quick button tap.

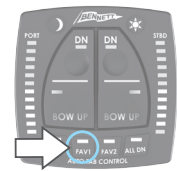

Or FAV2